MAGNETIC
Normal Power Factor

SP4835P

Ballast Type:	Electromagnetic	Starting Method:	Preheat	Unit Weight:	0.70 lb
Input Voltage:	230VAC+5%,-10%	Lamp Connection:	Series	Carton Quantity:	50
Input Frequency:	50 Hz.	Unit Color:	Raw	Skid Quantity:	3000

ELECTRICAL SPECIFICATION:

Line Voltage (V)	Lamp Type	Lamp Watts	No. of Lamps	Line Current (A)	Input Power (W)	Power Factor	Max Current THD (%)	Current Crest Factor	Ballast Factor	Wiring Diagram	B.E.F.
230	F4T5	4	1	0.17	8	≥ 0.25	≤10	≤1.7	1.00	001	12.50
230	F6T5	6	1	0.16	11	≥ 0.30	≤10	≤1.7	1.00	001	11.11
230	F8T5	8	1	0.14	11	≥ 0.35	≤10	≤1.7	1.00	001	11.11
230	CFT7W/G23	7	1	0.16	11	≥ 0.30	≤10	≤1.7	0.90	101	8.18
230	CFT9W/G23	9	1	0.14	11	≥ 0.35	≤10	≤1.7	0.80	101	7.27
230	CFQ9W/G23	9	1	0.14	11	≥ 0.35	≤10	≤1.7	0.80	101	7.27

PERFORMANCE:
- Electromagnetic reactor type ballast
- Preheat start
- Series operation
- Normal power factor
- Clamped core and coil
- Sound rated A
- Meets ANSI C82.1

APPLICATION:
- Maximum case temperature: 194ºF/90ºC
- Maximum ambient temperature: 104ºF/40ºC
- Minimum starting temperature Linear: 50ºF/10ºC
- Minimum starting temperature CFL: 32ºF/0ºC
- Remote mounting: 10ft.

SAFETY:
- UL/935 (Class P, Type 1 outdoor) listed
- Automatic reset thermal protection
- No PCB's

STYLE:

2X

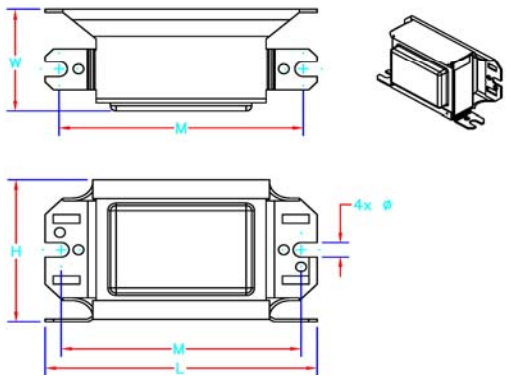

H	W	L	M	Ø
1 23/32	1 3/8	3 1/16	2 3/4	3/16
1.72	1.38	3.06	2.75	0.19
4.34 cm	3.51 cm	7.77 cm	6.99 cm	0.47 cm

WIRING DIAGRAM:

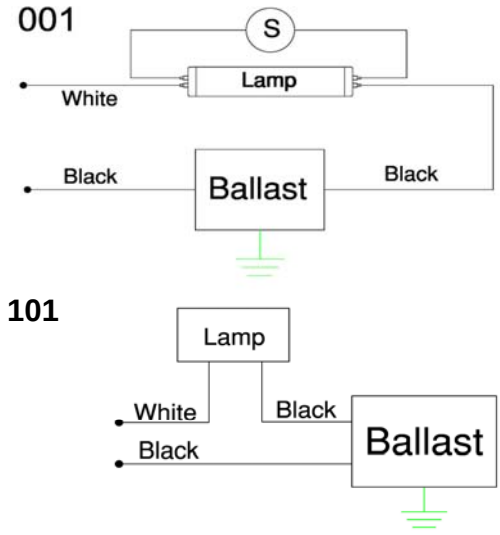

Standard lead lengths:
- Blk: 7" x 7"

* 3/8" Strip

WARRANTY

Robertson Worldwide warrants to the purchaser that this ballast will be free from defects in material or workmanship for a period of 2 years from date of manufacture when properly installed and under normal conditions of use. For more information on Robertson Worldwide's ballasts, call 1-800-323-5633 or visit www.robertsonww.com. Specifications subject to change without notice.

Revised 10/04/05

ROBERTSON WORLDWIDE
13611 Thornton Rd, Blue Island, IL 60406, TEL: 1-800-323-5633, FAX: 1-877-388-2420, www.robertsonww.com